

56 K FAX MODEM

Quick Start Manual

Installation of the Fax Modem Card:

Plug in the modem card Type II or Type III into the PCMCIA Slot. If you have problems to find this slot, have a look at your computer's user manual or consult the manufacturer of your computer. Plug in the PCMCIA-Card carefully into the slot. Make sure that the card is firmly seated in the slot and you are ready to setup and install your communication software.

Setup for DOS/Windows 3.x:

Before you can use your new modem, your computer must have the proper modem software drivers installed to access the modem. Your computer should have the Card and Socket Services drivers pre-installed. The Card and Socket Services driver software allows your computer to access the PCMCIA slots. If these are not already in your system, or if you do not know if they are installed, check your system manual or consult the manufacturer of your computer. The most popular and common Card and Socket Services are Systemsoft® CardWizard™, Phoenix's® PCM™ and AMI Card Manager Pro 3.0.

If Card and Socket Services drivers are already installed in your computer, you should be able to simply plug in your fax modem card and begin installing and using the software. Please be sure that the COM port for modem cards which is assigned by the Card and Socket Services is the same as the setting of your communication software in your computer.

Setup for Windows 95:

Windows 95 comes with most of the drivers necessary to access your fax modem. Just follow these steps to get up and running:

1. Switch of your PC.
2. Insert the fax modem card into a free PC Card slot in your PC, making sure that the card is securely inserted into the slot.
3. Start your PC again.
4. Windows will display the **"New Hardware Found"** dialog box. Select the **"Driver from disk provided by hardware manufacturer"** and click **"OK"**. If you do not see the above selection, simply click **"Next"** to continue. (For Windows 95 Release 2.0 user: Insert the driver disk into drive A: and click **"Finish"** to complete the installation process).
5. Make sure that the directory is A:\ in the drive window. Click **"OK"** to continue. The modem is now ready for use.

Setup for Windows 98:

Windows 98 comes with most of the drivers necessary to access your fax modem. Just follow these steps to get up and running:

1. Switch of your PC.
2. Insert the fax modem card into a free PC Card slot in your PC, making sure that the card is securely inserted into the slot.
3. Start your PC again.
4. Windows will display the **"New Hardware Found"** dialog box. Select the **"Driver from disk provided by hardware manufacturer"** and click **"OK"**. If you do not see the above selection, simply click **"Next"** to continue.
5. Make sure that the directory is A:\ in the drive window. Click **"OK"** to continue. The modem is now ready for use.

Setup for Windows NT4.0:

Windows NT comes with most of the drivers necessary to access your fax modem. Just follow these steps to get up and running:

1. Switch of your PC.
2. Insert the fax modem card into a free PC Card slot in your PC.
3. Start the PC again.
4. Double click on "**Control Panel/Modems**", select the „**Don't detect my modem; I will select it from a list**“ option and press the "**Next**" button.
5. Click on the "**Have Disk**" button form "**Install New Modem**" window and press the „**Next**“ button.
6. Windows then asks you to specify where the driver for the modem is located. Insert the fax modem drivers diskette into your floppy drive, select Drive "**A:**" and click "**OK**".
7. Select product name of fax modem from "**Models**" list box and press the "**Next**" button.
8. Select the available COM port from the list box and press the "**Next**" button.
9. The message "**Your modem has been set up successfully**" appears. That means the modem is now ready for use.

Installing the Fax/Modem Software:

The communications software which is included with this product comes with its own user's instructions located in the readme file. This software will enable you to use your modem in both data and fax modes.

Using Third Party Modem Communication Software:

The PC Card fax modem is designed to work with the software included with the modem. In addition, the modem will operate with most other third-party DOS and Windows data fax software applications. Please note the following when configuration your fax modem with third-party software.

- Many data communication programs require that you select a modem during installation. If you do not see a listing for this Fax Modem, you should select "**Generic Fax Modem**" or "**Standard Fax Modem**" as your modem type.
- If you are installing a fax program, it may ask you what Class of fax modem you have. You should respond by selecting "**Class 1**" or "**Class 2**" (optional, please refer to your User's Manual).